



**OLTEBACH
MOTORTEK**

Installation Instructions >> Center Stand >> Africa Twin 1000

**See attached pages for product kit,
recommended tools
and recommended torque specs.**



1.

Installation Instructions >> Center Stand >> Africa Twin 1000

1. Place the rubber bumper onto the center stand. Once the mounting holes have lined up, insert the supplied Allen bolt and tighten it using a 5mm Allen key.

2. Mount the center stand.

Tip: lubing the center stand's mounting holes using mechanical grease will improve functionality.



2.

OUTBACK MOTORCYCLE

3. The right side mounting hole must be properly hooked on the corresponding factory rod welded onto the frame.



4. Once the right side tab has been mounted, proceed to lining up the left side tab with the corresponding mounting hole.




3.

OUTBACK MOTORCYCLE

5. Insert the supplied spacer.



6. Push through the supplied 10mm diameter hex bolt with with the washer.

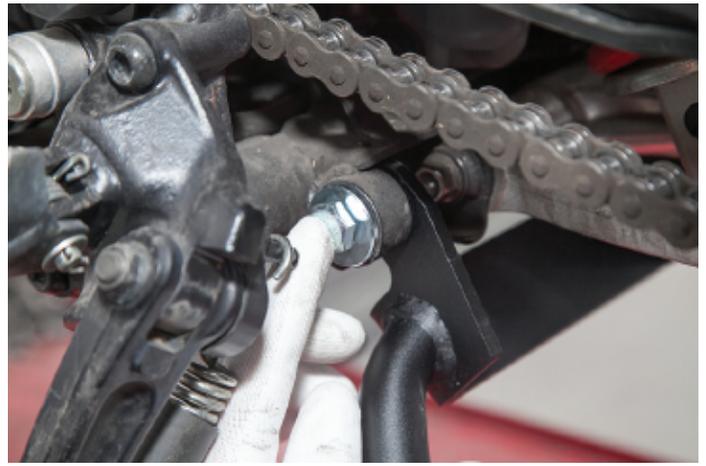

4.

Installation Instructions >> Center Stand >> Africa Twin 1000

7. On the rear side hand-thread the supplied locking nut.



8. Using two 17mm wrenches tighten the bolt and locking nut.



5.

Installation Instructions >> Center Stand >> Africa Twin 1000

9. Slide the smaller diameter spring inside the larger diameter one and attach them to supplied large hook as shown in the photo.



10. Attach the hook onto the mounting rod as shown in the photo.



6.

11. Using a long nose plier, grab the rear end of the springs and hook them onto the center stand's mounting tab. Make sure that the springs' hooks are fully attached and engaged!



12. Fully tighten all the bolts.

You've completed installing the center stand. Please test the product's functionality numerous times by lifting the bike and taking it off the center stand.

After a test ride, double-check all the bolts and nuts and the springs.

7.

Recommended Tools and Hardware List

1. Long-nose pliers
2. 2x 17mm wrench
3. 5mm Allen key
4. Hook
5. 8x20mm Allen bolt
6. 10x35mm Hex bolt +washer+locking nut
7. Spacer
8. Rubber bumper
9. 2x spring



8.